900 MHz Cordless Telephone with Headset Jack

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack 900 MHz Cordless Telephone uses the 900 MHz band for less interference, clearer sound, and greater range than 46/49 MHz cordless telephones. Its headset jack means you can connect an optional headset for hands-free convenience.

The phone's other features include:

40 Channels — automatically selects a clear channel when you make or answer a call, or you can manually change channels.

10-Number Memory Dialing — lets you store up to 10 numbers (3 one-touch and 7 speed-dial) in memory for easy dialing.

Page — lets you send a paging signal from the base to the handset to page someone or locate the handset.

Handset Volume Control — lets you adjust the volume you hear through the handset.

Programmable Ringer — lets you choose a high or low setting.

Long Battery Life — provides up to 7 hours continuous talk time, with 14 days standby battery life.

Super CCT Noise-Reduction Circuitry — provides clear telephone conversations, giving you sound clarity comparable to that of a corded phone.

Security Access-Protection Code — automatically prevents other cordless phone users from using your phone line.

Quick Talk — lets you answer a call by just lifting the handset from the base.

This telephone has been tested and found to comply with all applicable UL and FCC standards.

Important: Cordless phones such as this one require AC power to operate. When the AC power is off, you cannot dial out or receive incoming calls using your phone. You should also have a phone that does not need AC power to operate (not a cordless phone) so you can still make and receive calls if there is an AC power failure.

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

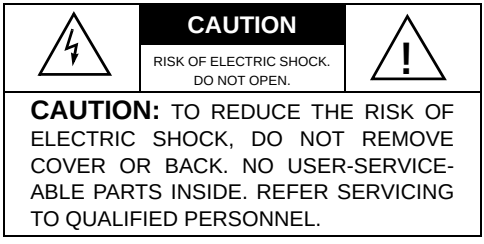
CAUTION
RISK OF ELECTRIC SHOCK.
DO NOT OPEN.
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.

This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

RadioShack®

www.radioshack.com℠

© 2001 RadioShack Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

READ BEFORE INSTALLATION

Each device that you connect to the phone line draws power from the phone line. We refer to this power draw as the device's *ringer equivalence number*, or *REN*. The REN is on the bottom of the base.

If you are using more than one phone or other device on the line, add up all the RENs. If the total is more than five (three in rural areas), your phones might not ring. If ringer operation is impaired, remove a device from the line.

FCC STATEMENT

This telephone complies with Part 68 of *FCC Rules*. You must, upon request, provide the FCC Registration Number and the REN to your phone company. These numbers are on the bottom of the base.

You must not connect your phone to any of the following:

- coin-operated systems
- party-line systems
- most electronic key phone systems

Note: Your telephone operates on standard radio frequencies, as allocated by the FCC. Even though the security access-protection code prevents unauthorized use of your phone line, it is possible for other radio units operating on similar frequencies within a certain area to unintentionally intercept your conversations and/or cause interference. This lack of privacy can occur with any cordless phone.

THE FCC WANTS YOU TO KNOW

In the unlikely event that your phone causes problems on the phone line, the phone company can temporarily discontinue your service. If this happens, the phone company attempts to notify you in advance. If advance notice is not practical, the phone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC.

Also, the phone company can make changes to its lines, equipment, operations, or procedures that could affect the operation of this telephone. The telephone company notifies you of these changes in advance, so you can take the necessary steps to prevent interruption of your telephone service.

Your phone might cause TV or radio interference even when it is operating properly. To eliminate interference, you can try one or more of the following corrective measures:

- Move the phone away from the receiver.
- Use outlets on different electrical circuits for the phone and the receiver.

Consult your local RadioShack store if the problem still exists. If you cannot eliminate the interference, the FCC requires that you stop using your phone.

LIGHTNING

Your telephone has built-in protection circuits to reduce the risk of damage from surges in telephone line and power line current. These protection circuits meet or exceed FCC requirements. However, lightning striking the telephone or power lines can damage your telephone.

Lightning damage is not common. Nevertheless, if you live in an area that has severe electrical storms, we suggest that you unplug your system when storms approach to reduce the possibility of damage.

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read and understand all instructions.

2. Follow all warnings and instructions marked on the product.
3. Never install telephone wiring during a lightning storm.
4. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
5. Never touch uninstalled telephone wires or terminals unless the telephone line is disconnected at the network interface.
6. Use caution when installing or modifying telephone lines.
7. Do not attach the AC power supply cord to building surfaces with metal fittings (if the product has an AC power cord).
8. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
9. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
10. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
11. Slots and openings in the cabinet and the back or bottom are provided for ventilation. To protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
12. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your local power company.
13. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be stepped on.
14. Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
15. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
16. To reduce the risk of electric shock, do not disassemble this product. Take it to a qualified serviceman when service or repair work is required. Opening or removing covers may expose you to dangerous voltage or other risks. Incorrect reassembly can cause electric shock when the product is subsequently used.
17. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
    - If the power cord is damaged or frayed.
    - If liquid has been spilled into the product.
    - If the product has been exposed to rain or water.
    - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
    - If the product has been dropped or the cabinet has been damaged.
    - If the product exhibits a distinct change in performance.
18. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.

19. Do not use the telephone to report a gas leak in the vicinity of the leak.

BATTERY SAFETY INSTRUCTIONS

CAUTION: TO REDUCE THE RISK OF FIRE OR INJURY, READ AND FOLLOW THESE INSTRUCTIONS.

1. Use only the appropriate type and size battery pack specified in the instruction manual provided for this product.
2. Do not dispose of the battery pack in a fire. The cell may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the battery pack. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling the battery pack in order not to short it with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
5. Charge the battery pack provided with or identified for use with this product only in accordance with the instructions and limitations specified in the instruction manual provided for this product.
6. Observe proper polarity orientation between the battery pack and battery charger.

SAVE THESE INSTRUCTIONS

INSTALLATION

You can place the phone on a flat surface or mount it on a wall plate or directly on a wall. Select a location that is:

- near an accessible AC outlet
- near a telephone line jack
- out of the way of normal activities
- away from electrical machinery, electrical appliances, metal walls or filing cabinets, wireless intercoms, alarms, and room monitors
- away from other cordless phones

The base's location affects the handset's range. You can try several locations to see which provides the best performance.

Cautions:

You must use a Class 2 power source that supplies 9V and delivers at least 210 mA. Its center tip must be set to positive and its plug must fit the phone's **9V DC IN** jack. The supplied adapter meets these specifications. Using an adapter that does not meet these specifications could damage the phone or the adapter.

- Always connect the AC adapter to the phone before you connect it to AC power. When you finish, disconnect the adapter from AC power before you disconnect it from the phone.

Your telephone connects directly to a modular telephone line jack. If your telephone wiring does not have a modular jack, you can update the wiring yourself using jacks and adapters (available at your local RadioShack store), or have the telephone company update the wiring for you. You must use compatible modular jacks that are compliant with Part 68 of *FCC Rules*.

Note: The USOC number of the jack to be installed is RJ11C (or RJ11W for a wall plate jack).

On a Desk Top

Follow these steps to place the phone on a desk, shelf, or table.

1. Plug one end of the supplied long modular cord into the **TEL LINE** jack on the back of the base. Then plug the cord's other end into a modular phone line jack.

2. Insert the supplied AC adapter's barrel plug into the **DC IN 9V** jack on the back of the base.
3. Route the adapter's cord through the strain relief slot on the base.
4. Plug the adapter into an AC outlet.
5. Lift the antenna to a vertical position.

On a Wall Plate or Wall

1. Plug one end of the supplied modular cord into the **TEL LINE** jack on the back of the base.
2. Route the modular cord through the right slot on the bottom of the base.
3. Insert the supplied AC adapter's barrel plug into the **DC IN 9V** jack on the back of the base.
4. Route the adapter's cord through the left side of the strain relief slot on top of the base and through the left slots at the bottom of the base.
5. Plug the modular cord into the wall plate jack, press the excess cord into the slot in the center of the base, then align the base's keyhole slots with the wall plate studs and slide the base down to secure it.

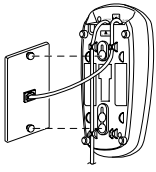

6. Press and lift out the handset holder, turn it over and rotate it 180°, then snap it back into place so it holds the handset.
7. Plug the adapter into an AC outlet.
8. Lift the antenna to a vertical position.

To mount the phone directly on a wall, you need two screws (not supplied) with heads that fit into the keyhole slots on the base's bottom.

Drill two holes $3^{16}/_{15}$ inches (100 mm) apart. Then thread a screw into each hole, letting the heads extend about $^{1}/_{8}$ inch (3 mm) from the wall. Then, after completing the modular and adapter cords connections, align the base's keyhole slots with the mounting screws and slide the base downward to secure it.

Connecting and Charging the Battery Pack

The phone comes with a rechargeable nickel-cadmium battery pack in the handset. Before using your phone, you must connect the battery pack and then charge it for about 24 hours.

1. Press down and slide the battery compartment cover in the direction of the arrow to remove it.
2. Lift the battery pack out of the compartment. Plug the battery pack's connector into the socket in the compartment. The connector fits only one way.



3. Put the battery pack into the compartment.
4. Replace the cover.

To charge the battery pack, simply place the handset on the base. The CHARGE/IN USE indicator on the base lights.

Recharge the battery pack when the handset beeps and the TALK/BATT indicator flashes.

Notes:

- If the CHARGE/IN USE indicator does not light when you place the handset on the base, be sure the battery pack and AC adapter are correctly and securely connected. Also, check the charging contacts on the handset and the base. If the contacts are dirty or tarnished, clean them with a pencil eraser.
- When you first use the phone after charging or recharging the battery pack, the phone might not work and you might hear an error tone. If this happens, return the handset to the base for a few seconds.

- About once a month, fully discharge the battery pack by keeping the handset off the base until the TALK/BATT indicator flashes. Otherwise, the battery pack loses its ability to fully recharge.
- If the TALK/BATT indicator does not light and the phone does not work, recharge the battery pack. (The battery power might be too low to light the indicator.)
- If the battery pack becomes weak during a call, you hear a beep every 3 seconds and the TALK/BATT indicator flashes every 3 seconds. Recharge the battery pack.
- If the battery pack is completely discharged, the handset loses the security access-protection code. To reset the code, place the handset on the base and charge the battery pack.

The supplied battery pack should last about one year. If the battery pack does not hold a charge for more than 2 hours after an overnight charge, replace it with a new 3.6-volt, 600 mAh battery pack with a connector that fits the socket in the battery compartment. You can order a replacement battery pack through your local RadioShack store.

Warning: Dispose of the old battery pack promptly and properly. Do not burn or bury it (see "BATTERY SAFETY INSTRUCTIONS" on Page 4 for additional information on proper battery handling).

If you have trouble replacing the battery, take the phone to your local RadioShack store for assistance.

Important: The EPA certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates RadioShack is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-THE-SHACK (1-800-843-7422) for information on Ni-Cd battery recycling and disposal bans/restrictions in your area. RadioShack's involvement in this program is part of the company's commitment to preserving our environment and conserving our natural resources.

Setting the Dialing Mode

Your phone comes set for tone dialing. If you have pulse service, you need to change the dialing mode. If you are not sure which type of service you have, do this test.

Lift the handset and listen for a dial tone. Press any number other than **0**.

Note: If your phone system requires that you dial an access code (**9**, for example) before you dial an outside number, do not press the access code.

If the dial tone stops, you have touch-tone service. *If the dial tone continues*, you have pulse service.

To set the dial mode, hold down **FLASH** until the phone beeps and the TALK/BATT indicator flashes, then press # to set to pulse mode or **TONE/*** to set to tone mode.

Note: The phone exits setting mode if a call or page is received, or if you press **TALK**.

If the battery pack power becomes too low, the dial mode might reset to tone. If you are on a pulse line and cannot make a call, try setting the dialing mode to pulse.

Setting the Ringer Tone/Volume

You can select either a high or low ringer tone/volume setting while the phone is not in use.

Press **VOLUME** to hear the current ringer setting. Repeatedly press **VOLUME** until you hear the desired ringer setting.

OPERATION

Making and Receiving Calls

To make a call, lift the handset and press **TALK**. To answer a call, simply lift the handset. Or, if the handset is not in place on the base, press any key. The TALK/BATT indicator on the handset and the CHARGE/IN USE indicator on the base light.

To end a call, place the handset on the base or press **TALK** so the TALK/BATT indicator turns off.

Note: If the handset is too far from the base while the phone is in use, pressing **TALK** might not disconnect the phone. Return the handset to the base to hang up the phone.

Selecting the Channel

The phone scans 40 channels (frequency pairs used between the base and the handset) and automatically selects a clear channel each time you make or receive a call.

If you hear other conversations or excessive noise during a call, press **CH** to select a different channel. The TALK/BATT indicator flashes, and the handset beeps, followed by a brief pause as your phone searches for a clear channel.

Note: If the handset is too far from the base, an error tone sounds and the channel might not change. Move closer to the base.

Setting the Handset Volume

To change the volume you hear through the handset, press **VOLUME** during a call. The handset volume has three settings: low, medium and high.

Using Redial

To quickly dial the last number dialed, press **REDIAL** when you hear a dial tone.

Notes:

- The redial memory holds up to 32 digits, so you can redial long-distance as well as local numbers.
- The redial memory also holds pause entries. See “Entering a Pause” on Page 8.
- The redial memory does not store a flash entry or any digits you press after **FLASH** (see “Using Flash”).

Using Flash

FLASH performs the electronic equivalent of a switchhook operation for special services, such as Call Waiting.

For example, if you have Call Waiting, press **FLASH** to answer an incoming call without disconnecting the current call. Press **FLASH** again to return to the first call.

Note: If you do not have any special phone services, pressing **FLASH** might disconnect the current call.

Using Tone Services on a Pulse Line

Some special services, such as bank-by-phone, require tone signals. If you have pulse service, you can still use these special tone services by following these steps.

1. Dial the service’s main number.
2. When the service answers, press **TONE/ ✱**. Any additional numbers you dial are sent as tone signals.
3. After you complete the call, return the handset to the base or press **TALK**. The phone automatically resets to the pulse mode.

Paging

To page the person who has the handset or to locate the handset when the phone is not in use, press **PAGE/FIND** on the base. The handset beeps for 1 minute. To stop it from beeping sooner, press any key on the handset or return the handset to the base. Press **PAGE/FIND** again to stop the paging at the base.

Memory Dialing

You can store up to 10 numbers in memory, then dial a stored number by pressing a one-digit memory location number. Also you can dial a number stored in the memory location number 1, 2, or 3 with a touch of a button.

Each number you store can be up to 16 digits long.

Storing a Number in Memory

Note: An error tone sounds and the phone exits the programming mode if you wait more than 20 seconds between each key press.

1. Lift the handset.
2. Press **MEM**. The TALK/BATT indicator blinks.
3. Enter the number and any **TONE/✻** mode changes or **PAUSE** entries (see "Entering a Pause").

   Notes:

   - Each **TONE/✻** or **PAUSE** entry uses one digit of memory.
   - If you try to enter more than 16 digits, the phone beeps 5 times and exits the programming mode. Start over at Step 2 and enter no more than 16 digits in Step 3.
4. Press **MEM** again, then enter the memory location number (**0**–**9**) where you want to store the number. A tone sounds to indicate that the number is stored.

To replace a stored number, simply store a new number in its place. Or, lift the handset and press **MEM** twice. Then press the memory location number (**0**–**9**) you want to clear. A tone sounds.

Entering a Pause

In some telephone systems, you must dial an access code (**9**, for example) and wait for a second dial tone before you can dial an outside number. You can store the access code with the phone number. However, you must also store a pause after the access code to allow the outside line time to connect. To do so, press **PAUSE**. Each press enters a 2-second pause. For a longer pause, press **PAUSE** additional times.

Dialing a Memory Number

To dial a number stored in memory, lift the handset and press **TALK**. The TALK/BATT indicator lights.

When you hear a dial tone, simply press **MEM** and enter the memory location number for the number you want to dial.

To dial a number stored in the memory location 1, 2, or 3, just press **M1**, **M2**, or **M3**. You need not press **TALK** when you use these buttons.

Note: If you select an empty memory location, the phone beeps 5 times.

Chain-Dialing Service Numbers

For quick recall of numbers for special services (such as alternate long distance or bank by phone), store each group of numbers in its own memory location.

To use the stored special service information, dial the service's main number first. Then, at the appropriate place in the call, press **MEM** and the number for the location where the additional information is stored.

Testing Stored Emergency Numbers

If you store an emergency service's number (police department, fire department, ambulance) and you choose to test the stored number, make the test call during the late evening or early morning hours to avoid peak demand periods. Also, remain on the line to explain the reason for your call.

Using a Headset

You can make or answer calls with hands-free convenience using an optional headset that has a $^{3}/_{32}$-inch (2.5-mm) plug. We recommend RadioShack Cat. No. 43-194, which is specially designed for use with the phone.

To connect the headset, pull open the rubber cover marked on the side of the handset, then insert the headset's $^{3}/_{32}$-inch plug into the jack.

Notes:

- Connecting a headset disconnects the handset's earpiece and microphone.
- **VOLUME** on the handset (see "Setting the Handset Volume" on Page 7) also controls the connected headset's volume.
- If you place the handset on the base to recharge it while the headset is connected, be sure the handset seats properly.

With a headset connected, you make or answer calls as usual using the keys on the handset.

When you finish using the headset, disconnect it from the handset and close the rubber cover to protect the jack.

TROUBLESHOOTING

We do not expect you to have any problems with your phone, but if you do, the following suggestions might help.

Problem	Suggestion
Low volume or unusual sounds	Someone has picked up another phone on the same line. Hang up the other phone.
	If you are using the headset, ensure the headset plug is properly connected to the jack.
Severe noise interference	Press **CH** to change the channel.
	Keep the handset away from computers, remote control toys, wireless microphones, alarm systems, intercoms, room monitors, fluorescent lights, and electrical appliances.
	Move to another location or turn off the source of interference.
	Hang up and redial the number.
The phone cannot be operated at a useful distance from the base because the signal becomes weak or noisy (handset's range has decreased).	Lift the base's antenna to a fully vertical position.
	Be sure neither the handset nor base antenna is touching a metal surface.
	Return the handset to the base to recharge the battery pack.
The phone does not work or works poorly.	Be sure the base's phone line cord and AC adapter are correctly and securely connected, and the battery is charged.
The handset battery does not charge.	Check the charging contacts on the handset and base. If they are dirty, clean them with a pencil eraser.
	Be sure the battery is properly connected.
	Be sure the handset is properly seated on the base.
Handset does not ring or receive a page.	Lift the base's antenna to a fully vertical position.
	Move the handset closer to the base.
	Move the base away from other electrical devices.
	Return the handset to the base to recharge the battery pack.

Problem	Suggestion
The handset stops working or works poorly during a call.	Move the handset closer to the base.
	Lift the base's antenna to a fully vertical position.
	If the base lost power while the handset was off of it, the security access-protection code might have changed. With the handset removed from the base, restore power to the base, then place the handset back on the base. The CHARGE/IN USE indicator lights, indicating that the code is set again.
	Be sure the handset's battery pack is charged. (If the battery pack power is too low, it does not have enough power to light the TALK/BATT indicator.)

If you still have problems, disconnect the phone. If other phones on the same line work properly, the fault is in this phone or its installation. If you cannot find the problem, take your phone to your local RadioShack store for assistance.

CARE

Keep the phone dry; if it gets wet, wipe it dry immediately. Use and store the phone only in normal temperature environments. Handle the phone carefully; do not drop it. Keep the phone away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the phone's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If your phone is not performing as it should, take it to your local RadioShack store for assistance. If the trouble is affecting the telephone lines, the phone company can ask you to disconnect your phone until you have resolved the problem.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell *12/99*

RadioShack Corporation
Fort Worth, Texas 76102

Cat. No. 43-1107 D/1108 D
UCZZ01345ZZ
07A01
Printed in China